


Operation manual LEO Sound Generator



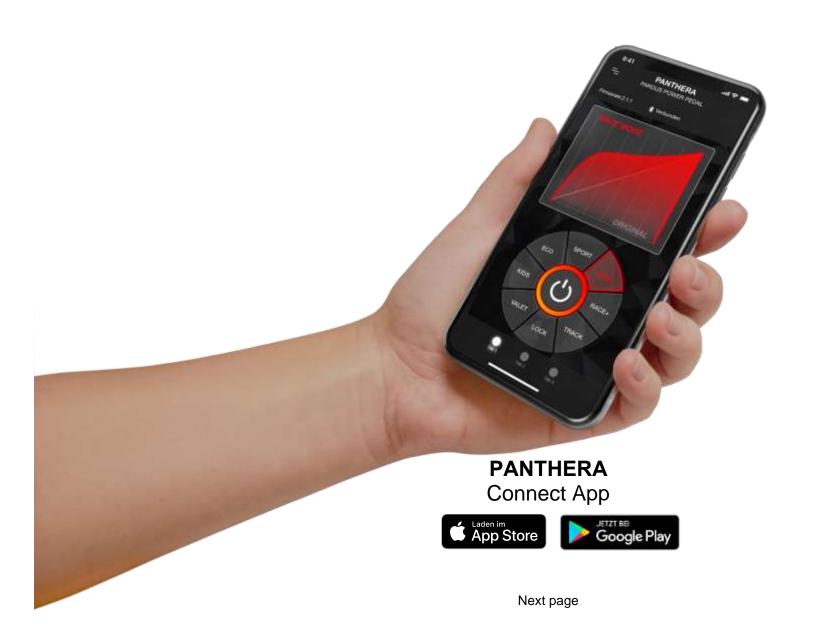

Safety instructions

The product described in this manual has been developed, manufactured and subjected to checks in compliance with the necessary safety requirements. To ensure safe function and rule out danger for persons and objects, this product must be installed properly.

This manual is designed using the example of a vehicle model. Deviations from the individual models are possible.

It applies the German warranty law. For personal and material damage, caused by non-observance of these operating instructions, PANTHERA Automotive GmbH assumes no liability.



Important information



Information

For your own safety, our instruction must be strictly followed.

The applicable safety regulations for protective labor legislation in each country must be observed. The user is responsible for compliance with the current legislation itself.

Technical Hotline



If you have questions or suggestions for installation of our PANTHERA Sound Generator, you can reach us Monday to Saturday from 9:00am till 5:00pm.

Hotline number: +49 163 33 66 5



PANTHERA CONNECT


HOME SCREEN






PANTHERA CONNECT

MENU SCREEN

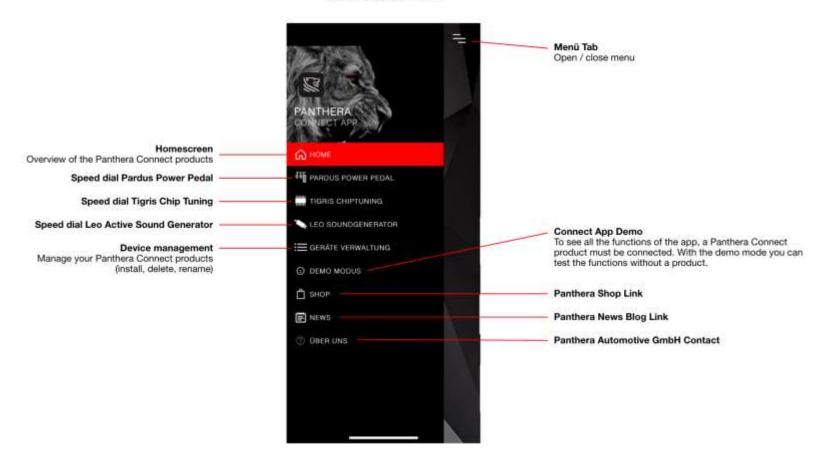



PANTHERA CONNECT DEVICE CONNECTION

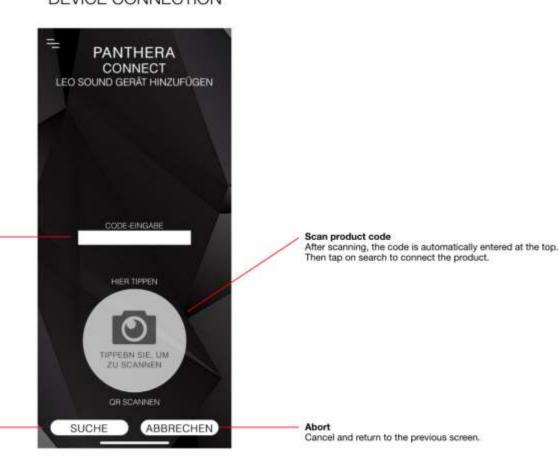

Enter product code


This is located on the back of each product and on the connection card included with the product.

Product Search

Searches for the product to be connected with the ignition or engine switched on, then the system automatically switches to the product screen.




PANTHERA CONNECT DEVICE MANAGEMENT

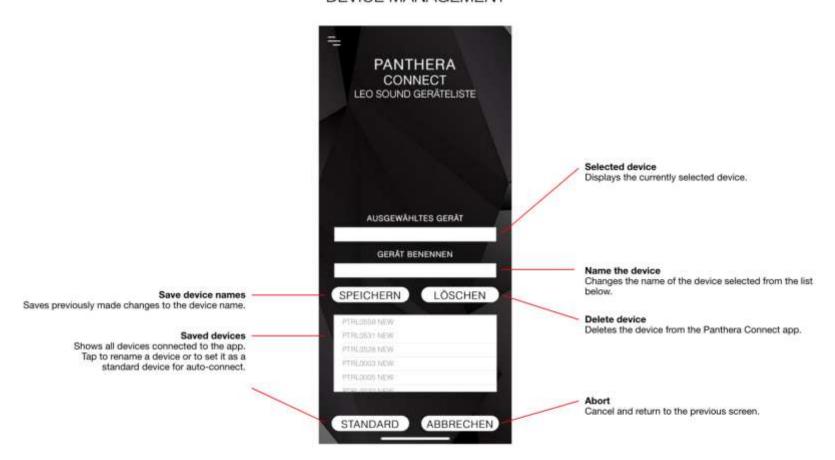



PANTHERA LEO

ACTIVE SOUND SCREEN

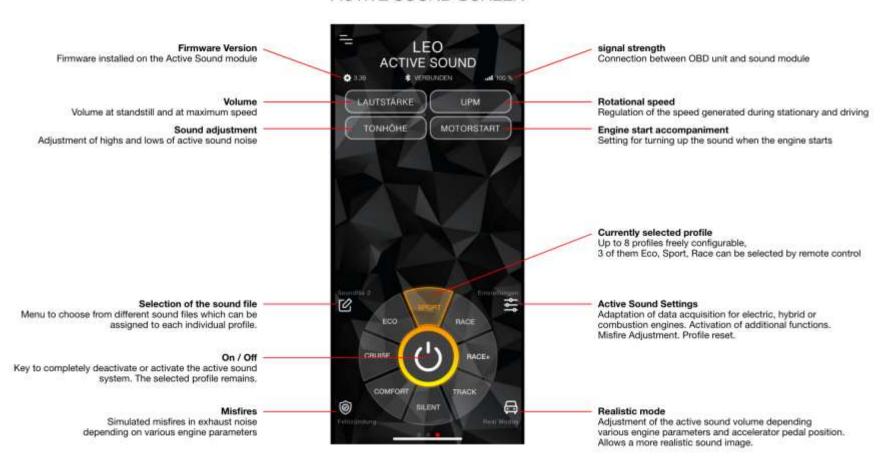



Leo Active Sound Settings General settings for the Active Sound System, please consult a technician before use. Teach radio remote control Tap and press a button on the radio remote control to connect it to the Active Sound System, Just to learn a new remote

control, a remote control has already been taught in as

delivered.

Display input speed The speed transmitted from the engine to the Active Sound System in real time.

Simulated speed slider In order to accelerate in demo mode, simply slide the slider slowly to the right.



Calibrate accelerator pedal settings

The "MISFIRE" and "REAL MODE" for a more realistic exhaust sound requires the accelerator pedal position and enables quieter driving at a lower position and louder roar the further the accelerator pedal is pressed.

To calibrate, press the button and press the accelerator fully once as indicated on the screen


Output speed display

The speed adjusted by our sound module and adjustable via the Panthera Connect app in real time.

Speed simulation

Active sound demonstration, for situations in which the vehicle cannot / may not be started, such as tuning meetings, in exhibition halfs, etc.



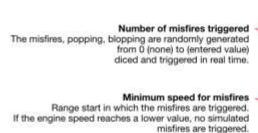


Minimum accelerator pedal position for misfires

Range start in which the misfires are triggered.

At a lower accelerator pedal position, no simulated misfires are triggered.

Save misfire settings

Saves the values set above for triggering the simulated misfires.

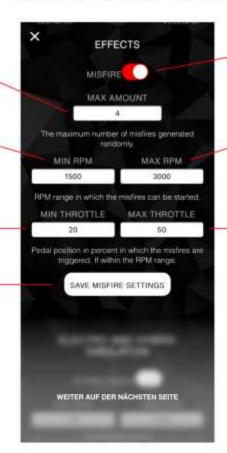

Misfires

Activates or deactivates simulated misfires when changing loads. "REAL MODE" must also be activated for use.

Maximum speed for misfires

End of range in which the misfires are triggered.

If the engine speed reaches a higher value, no simulated misfires are triggered.

Maximum accelerator pedal position for misfires

End of range in which the misfires are triggered. At a higher accelerator pedal position, no simulated misfires are triggered.



ELECTRO AND HYBRID SIMULATION HYBRID MODE MAX RPM MIN RPM RPM range for sound generation depending on the pedal position. Only for hybrid vehicles! SAVE HYBRID SETTINGS ELECTRO MODE Trigger RPM simulation mode. Only for electric vehicles! RESET SETTINGS RESET SETTINGS RESET SETTINGS WEITER AUF DER NÄCHSTEN SEITE

Minimum speed in E mode

Value for idle speed of the simulated Active Sound noise in hybrid vehicles in electrical operation, It makes sense. For example 500 to 1000 revolutions per minute.

Save hybrid settings

Save active sound settings for hybrid vehicles.

Reset settings

Caution! All settings of the Panthera Leo Active Sound Generator are reset to factory settings.

Hybrid vehicle mode

In hybrid vehicles which switch back and forth between the electric motor and the combustion engine, this mode must be activated so that the active sound can be heard permanently.


Maximum speed Speed in E mode

Value for maximum speed of the simulated active sound noise in hybrid vehicles in electrical operation. It makes sense, For example 3000 to 5000 revolutions per minute.

Electric vehicle mode

This mode must be activated for Active Sound Simulation for electric vehicles. For hybrid vehicles, please select the hybrid mode.



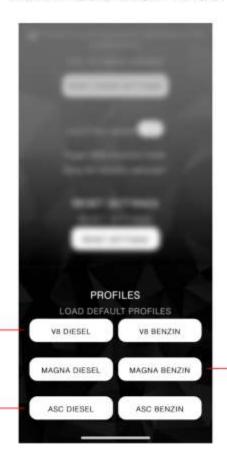

Standard Profile Leo V8
Load preset sound profiles for the power amplifier you are
using and the engine variant in your vehicle.


Standard Profile Leo Active Sound Cube

Load preset sound profiles for the power amplifier you are using and the engine variant in your vehicle.

Standard Profile Leo Magna
Load preset sound profiles for the power amplifier you are
using and the engine variant in your vehicle.



PANTHERA CONNECT QUICK SWITCH PRODUCT SCREENS

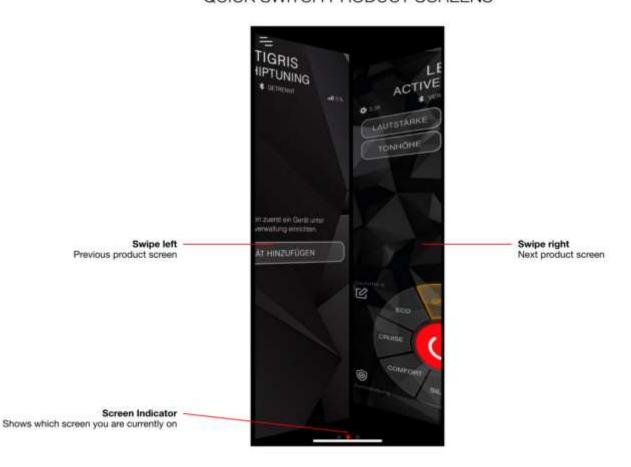

The Panthera team wishes you lots of fun and a good trip!